


## PHP2030 Air Compressor Replacement

For questions, clarifications or assistance call 303-670-8882

Tools required: Phillips screwdriver #2, needle-nose pliers

**BEFORE BEGINNING** turn the main power switch off as illustrated below and unplug the power cord.

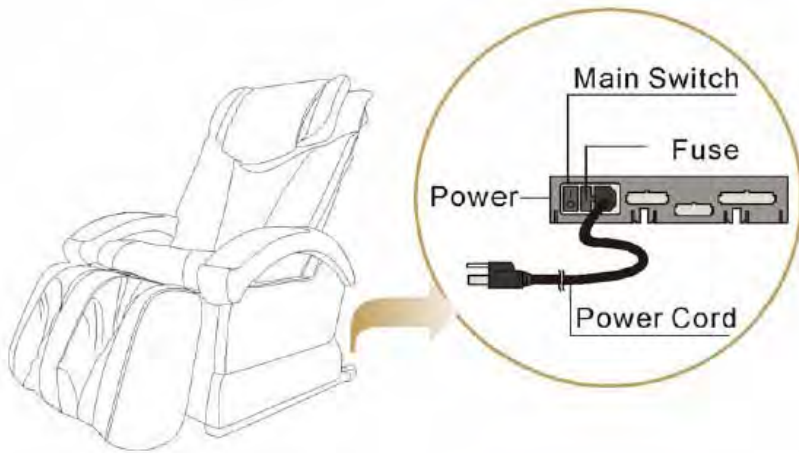


Allow the chair to sit for 10 minutes before proceeding.

Step 1) Lock the leg rest assembly up. This will allow increased access to the working area



Lift the leg rest up and, while holding it up....use your left hand to push the locking mechanism (square tubing) up. Release your hold on the leg rest assembly. The entire assembly should remain up for better access to the work area. (After completion of the entire task, lower the leg-rest by simply lifting the entire assembly up which will automatically release the lock).

Step 2) Remove all Phillips screws holding vanity panel to chair frame.

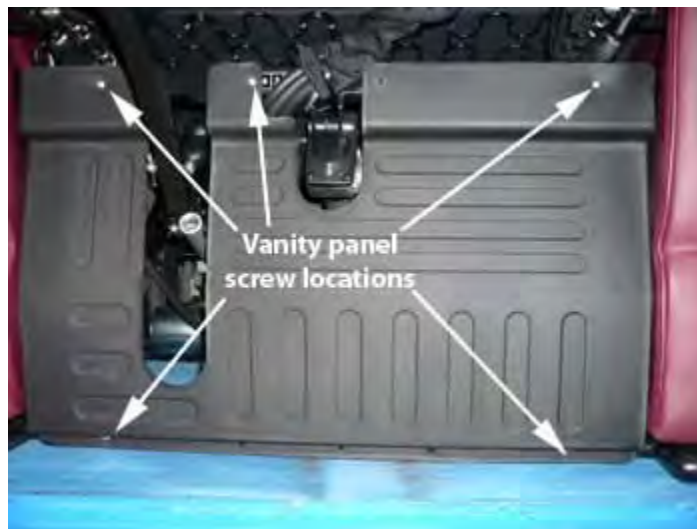

Step 3) Lay backrest down between armrests.

Move to the back of the chair, slide your hand down the back and locate the back latch lever below.



Position already folded forward shown here.




The exact position of the latch release is shown above.

After you locate the latch release pull toward you to release the lock, the backrest will be free. With your hand on the top of the backrest gently fold toward the seat of the chair to a resting position. DO NOT drop the back onto the seat unsupported.


Step 4) Remove the front air lines from air compressor.



Step 5) Remove the rear air lines.

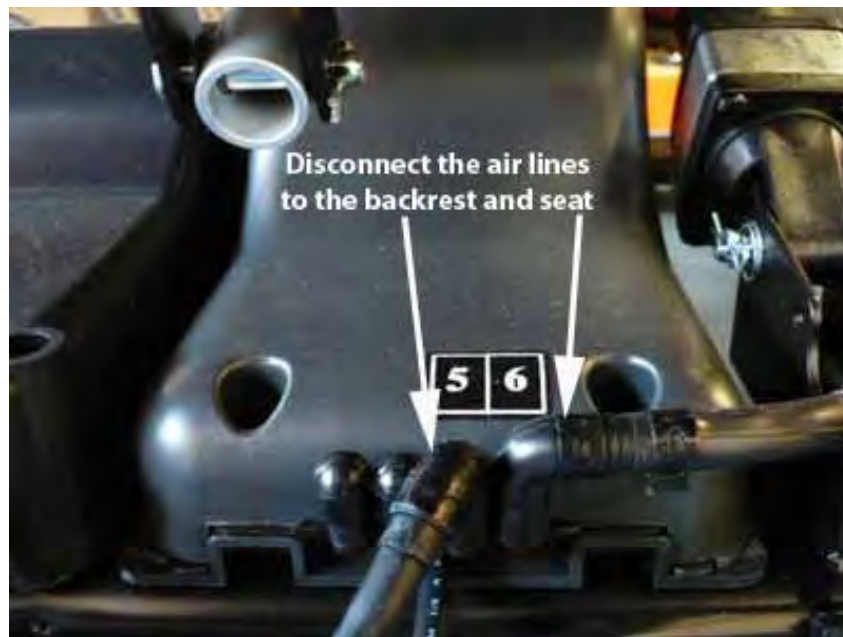


Step 6) Remove the screws holding the cover on the compressor.

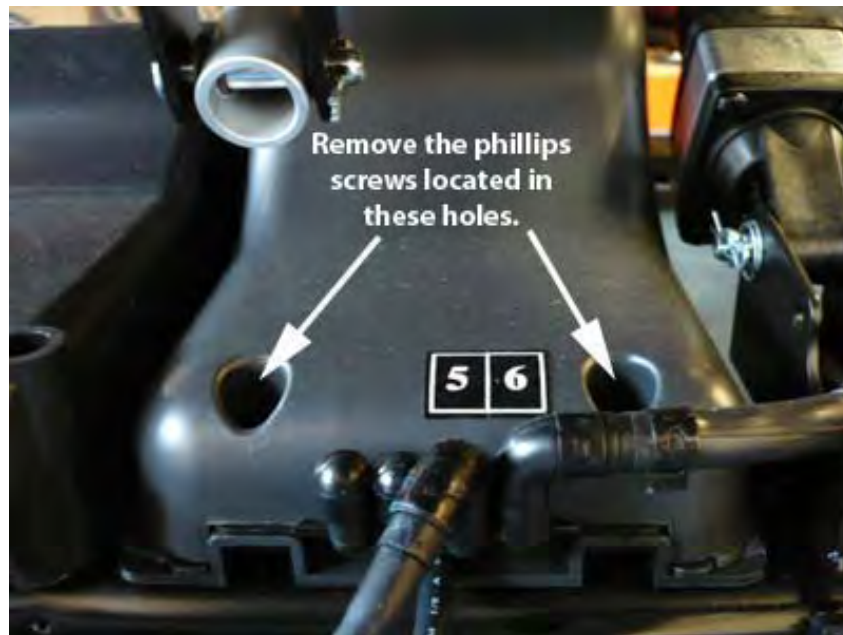

Step 7) Remove the cover by lifting up to release front lock tabs and sliding out from front of chair.

Step 8) Unplug the wiring harness from the air compress expansion board.

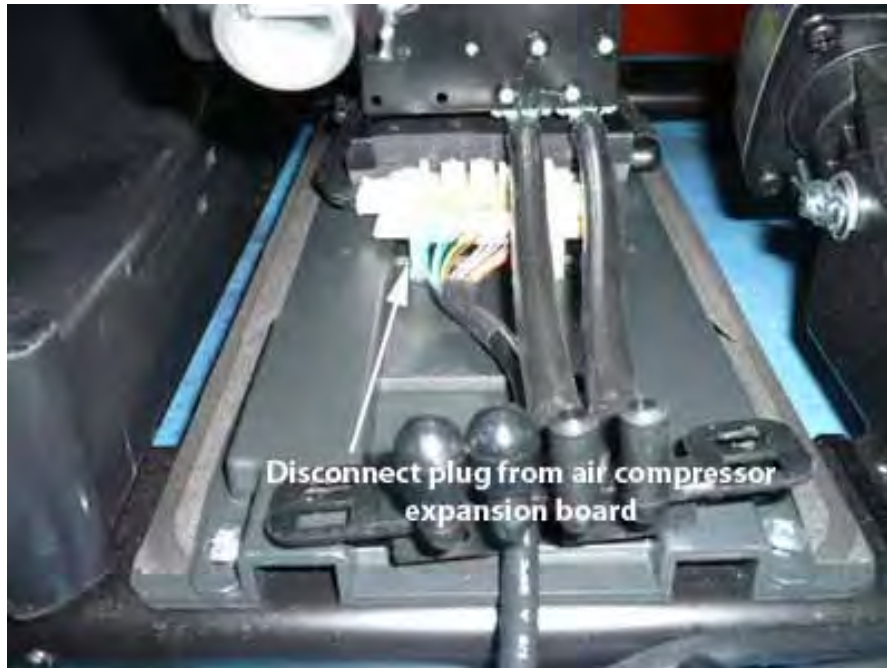

Step 9) Remove the 2 screws holding the air compressor to the front chair frame.



**Step 10) Remove the 2 screws holding the air compressor to the rear chair frame.**



**Step 11) Slide the air compressor out from the front of the chair.**

**Step 12) Reverse these instructions to reinstall the new air compressor.**