








PRODUCT DESCRIPTION & FUNCTIONS

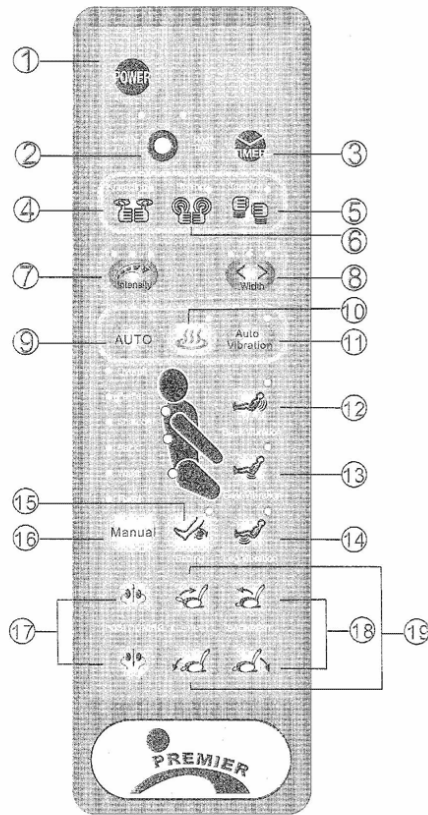








CAUTIONS:

- DO NOT sit and step on the controller.
- DO NOT let the controller fall down onto the floor.
- DO NOT press the controller too hard. Keep hands dry to use the controller.
- DO NOT use foreign and hard objects to press the controller, including nails.
- Improper use will result in damaging the controller.
- Users need only finger tips to press the buttons on the controller.
- Turn off the power after finishing using the chair.







PRODUCT DESCRIPTION & FUNCTIONS

- ①  **Start/Stop**
Press the button to turn on/off the chair. The LED shows "SY" when the chair is on. When using the chair, press the button to reset the chair into full upright position, and stop all massage functions.
- ②  **Special Function: Healthy Massage**
Press the button to turn on/off a 15-minute programmed massage. The LED shows "HE" and massage functions through LED flasher, and starts counting down the time. The function can automatically adjust the massage rollers' width and speed to the user.
- ③  **Special Function: Rest Time**
Press the button to turn on/off the function. A minimum 10-minute preset time is set. Users can set time length up to 99 minutes, shown on the LED flashers. The function consists of 3 phases. First phase is a 3-minute massage. Then following a napping phase without massaging for the user to relax on the chair. 3 minutes before the set time ends, the third phase starts with massaging to awake the user.
- ④  **Kneading**
Press the button to turn on/off the kneading function. Users can combine the function with other manual functions, and set time between 5 and 30 minutes.
- ⑤  **Tapping**
Press the button to turn on/off the tapping function. Users can combine the function with other manual functions, and set time between 5 and 30 minutes.
- ⑥  **Rolling**
Press the button to turn on/off the rolling function. Users can combine the function with other manual functions, and set time between 5 and 30 minutes. < not available for fixed function >

PRODUCT DESCRIPTION & FUNCTIONS

- ⑦  **Speed**
Press the button to select fast, medium, or slow. Users can apply the speed function to kneading and tapping functions. The function is not available for the rolling function. When running the auto or special Function, the speed function changes to follow the speed of programmed massage.
- ⑧  **Width**
Tapping and Rolling width adjustment. Users can select wide, medium, or narrow to fit themselves. The function is not available for the Kneading function.
- ⑨  **Auto**
Press the button to select Auto functions for whole back, partial back, shoulders, waist, or fixed point. The preset time is 15 minutes, shown on the controller. The selected functions are also shown on the panel through LED flashing, and follows a programmed massage to adjust the width and speed to the user automatically.
- ⑩  **Warmer**
Press the button to turn on/off the warmer in the backrest. The function can work with other functions.
- ⑪  **Auto Vibration**
Press the button to turn on/off the function of auto cycle vibrations. The function runs a computer program to apply vibration intensities and adjust speed to the user.
- ⑫  **Back Vibration**
Press the button to turn on/off and select the 2-level intensity, strong or weak. The function can work with other functions together. When using Auto or Special Function, the back vibration follows a default program.
- ⑬  **Seat Vibration**
Press the button to turn on/off and select the 2-level intensity strong or weak. When using the Auto or Special Function, the seat vibration follows a default program.

PRODUCT DESCRIPTION & FUNCTIONS

- ⑭  **Leg Vibration**
Press the button to turn on/off and select the 2-level intensity, strong or weak. When using the Auto or Special Function, the leg vibration follows a default program.
- ⑮  **Foot Rollers**
Press the button to turn on/off and select the 3-level intensity, weak, medium, or strong. The function can work with other functions together.
- ⑯  **Manual**
Press the button to select functions for whole back, partial back, shoulders, waist, or fixed point. The preset time is 15 minutes, (can be reset up to 30 minutes) shown on the controller. The selected functions are also shown on the panel through LED flashing. Users can select combinations of functions.
- ⑰  **Rollers Positioning Upward/Downward**
When using the functions of Overall and Partial, press and hold the Upward/Down button to adjust the rollers going up or down, then release the button.
(※Not working when using the Special and Auto function)
- ⑱  **Backrest Adjustment**
Press and hold the up or down button to adjust the angle of the backrest. Double press the up or down button to bring the footrest at the same time.
- ⑲  **Footrest Adjustment**
Press and hold the up or down button to adjust the angle of the footrest. Double press the up or down button to bring the footrest to the upmost or downmost position.