

AIR PRESSURE STRENGTH SETTING

< < For Distributors Only > >



There are 3 default settings - weak, medium & strong, the time length of air inflation are below:

Setting 1:

(Weak Mode) Weak: 2 seconds.
3 sec. Strong: 3 seconds

Setting 2:

(Medium Mode) Weak: 3 seconds
5 sec. Strong: 5 seconds

Setting 3:

(Strong Mode) Weak: 5 seconds
8 sec. Strong: 8 seconds

For PHP 2025, the current default setting is medium mode.

Setting Instructions:

Please make sure all buttons are off, but the main power switch is on.

1. Setting weak mode:

Press "Intensity", "Mode" & "Stretch" at the same time, you heard one beeper sound. Then the weak mode setting is finished.

2. Setting medium mode:

Press "Intensity", "Mode" & "Stretch" at the same time, until two beeper sounds are heard. Then the medium mode setting is finished.

3. Setting strong mode:

Press "Intensity", "Mode" & "Stretch" at the same time, until three beeper sounds are heard. Then the weak mode setting is finished.