



## 2025 Tapping Seat Replacement

Take nut off bearing that the tapping seat surrounds.

Pull off bearing. If this doesn't come off easily, a three jog puller can usually be borrowed from an auto parts store with a deposit.

Remove Phillips screw on front side of tapping seat holding the pin in.

Break away any plastic left around the pin that goes through tapping seat and massage arm pin. Remove pin. Lube pin with oil – not wd40 or anything that is bad for plastic – vegetable oil or Pam is fine.

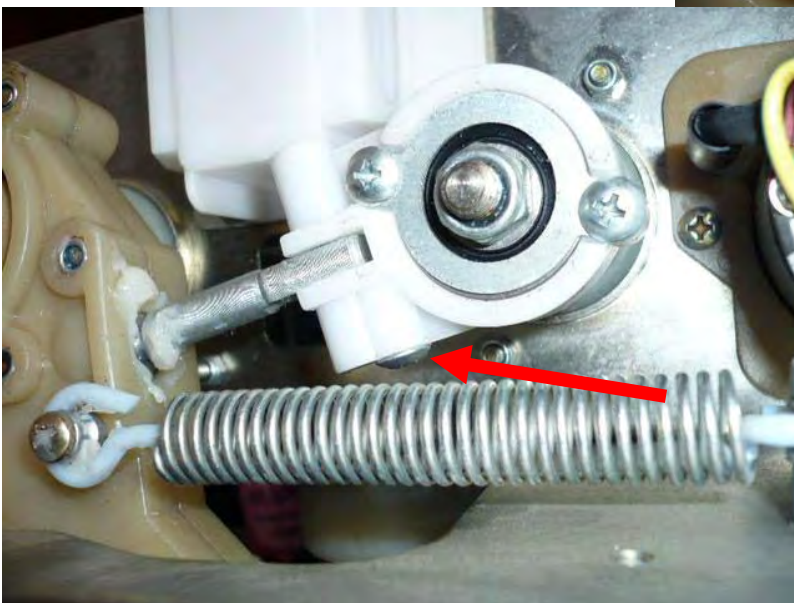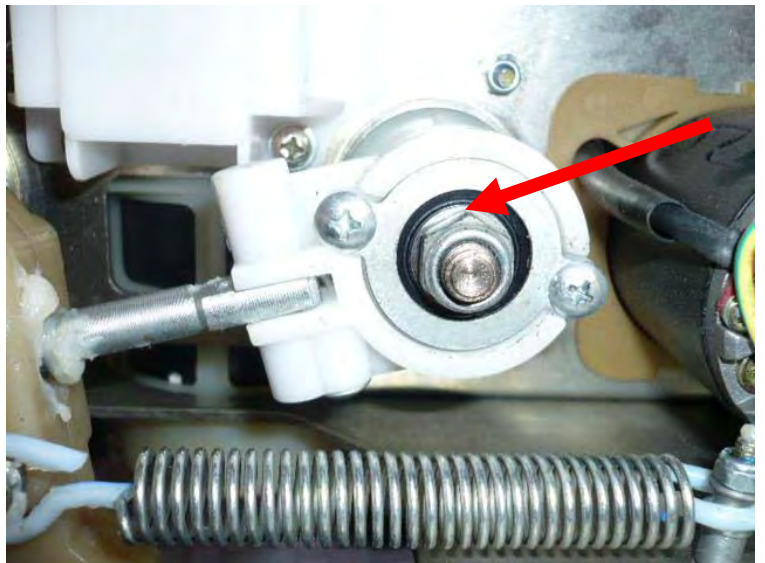

VERY GENTLY push pin through tapping seat with massage arm aligned in the center. If you meet resistance, try re-aligning and try again. Channel locks work well as you can get even pressure. Put Phillips screw back into front side. Put bearing back onto rod and nut on. If the bearing doesn't seem to be in the correct position get back onto the rod, then spin the belt that is one the one side of the mechanism to rotate the massage arm into place.