


Control panel instruction

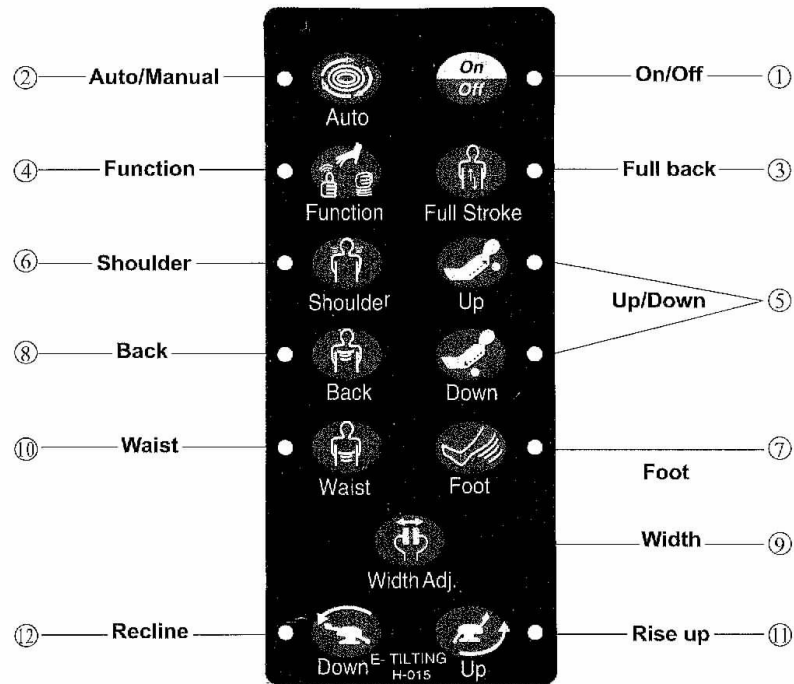

1. **On/Off:** Press this key to turn on power and massage for 15 minutes automatically. Press it again to turn off power.
2. **Auto/Manual:** When the power is turned on, this indicator gets lighted, all procedure is pre-programmed. Press this key, it switches to "Manual" mode. You can choose functions you want and move rollers as you like.
3. **Full back:** Auto full back is the default mode. Press this key to switch to manual full back mode, all procedure will be set up by yourself. Press this key again to switch to auto full back mode.
4. **Function:** Press this key under "Manual" mode can choose kneading, tapping and rolling massage functions.
5. **Up/Down:** Press and hold down the 'UP' key will move rollers higher, release it, rollers will stop at that point. Press and hold down the 'DOWN' key will move the rollers lower, release it, rollers will stop at that spot.
6. **Shoulder:** Press this key to choose shoulder massage range during manual mode. You may press "Function" key to choose kneading, tapping or rolling function. Press "Auto/Manual" key to switch to "Auto" mode.
7. **Foot:** Press this key to perform foot massage function.
8. **Back:** Press this key to choose back massage range during manual mode. You may press "Function" key to choose kneading, tapping or rolling function. Press "Auto/Manual" key to switch to "Auto" mode.
9. **Width:** Press and hold down this key to adjust massage roller width, it keeps moving in and out, until you release your finger, then it chooses that width for you.
10. **Waist:** Press this key to choose waist massage range during manual mode. You may press "Function" key to choose kneading, tapping or rolling function. Press "Auto/Manual" key to switch to "Auto" mode.
11. **Rise up:** Press this key to raise chair back up, at the meanwhile, it lowers down the footrest. Press this key when chair back is rising will stop rising the chair back.
12. **Recline:** Press this key to recline chair back, at the meanwhile, the footrest rises. Press this key when chair back reclines will stop reclining.