




1. To prevent any injuries or accident, children are restricted to use the chair or play on it.




2. Users must stop and turn the power off immediately, if they feel unwell / ill when using the chair.

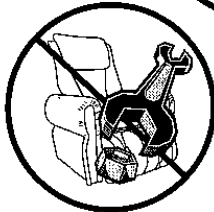

3. Whenever the chair is functioning abnormally, turn off the main power switch, and unplug. Call for our maintenance immediately. DO NOT attempt to disassemble/repair the chair, to prevent dangers.


4. Keep hands/feet away from the back massage mechanical devices.

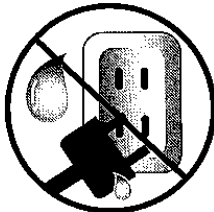



5. UNPLUG the power cord and keep hands dry, before doing any maintenance.

6. Users with any of the following conditions MUST consult their physicians before using the chair:

- (1) People with heart diseases.
- (2) Women with malignant tumors.
- (3) Women who are pregnant or menstruating.
- (4) People with spinal abnormalities or curvature.
- (5) People who are being treated or just completed Treatment.
- (6) People with osteoporosis.

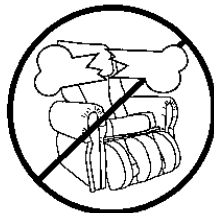

Safety Precautions

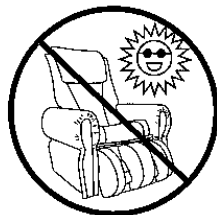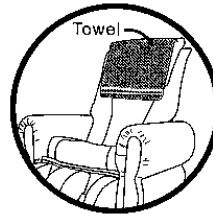

7. DO NOT use the chair under dirty, greasy, smoggy or humid environment.

8. DO NOT expose the chair directly to the sun and DO NOT place the chair neighbouring to other electric appliances.



9. DO NOT clean the chair with alcoholic or evaporative solutions in order to protect the fabric or leather cover.

10. STOP using the chair and UNPLUG the power cord if the leather or fabric cover is torn or worn-out and causes exposure of the mechanism.

Contact our maintenance service immediately for help.

11. Users with hair pomade, please place a towel under their heads, in order to protect the leather or fabric cover.

12. DO NOT load two persons on the chair at the same time.

13. People under the age of 16 is suggested not to use the chair.

14. People weigh over 260 pound is restricted to use the chair.

15. DO NOT drink or eat during massage.

16. People who are drunk, DO NOT use the chair.

17. It is suggested to turn off the chair after been operated for 4 hours, also every user shall take a short break after a 15 minute massage.

Cautions For The Back Warmer

- 1 • To prevent any burns, DO NOT be barebacked when using the warmer.**
- 2 • To prevent any burns, children, disabled people, and persons who are sense-retarded DO NOT use the function of fixed-point warmer.**
- 3 • DO NOT use the warmer for more than 30 Minutes. Please turn off the warmer for a few minutes before using it again.**

Continuously using the warmer may result in over-heating and burns.

- 4 • Turn off the warmer BEFORE shutting down the power of the chair.**

Product Specifications

Product Name : MASSAGE CHAIR

Model Number : PHP-2026

Voltage : AC 110 - 120V / 60Hz

Consumption : 7W - 300W

Timer Range : 5 - 30 minutes

Lying Angle : 125 - 175 degrees

Measurement : 40 x 35 x 41 inches

Weight : 198 lbs