



Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy.



Call-1-866-629-7626 


- Home
- Shipping
- Products
- Back Education
- Warranty
- Contact Us

PHP 2022 version 3 Remote Control Replacement, For questions, clarifications or assistance call 303-670-8882


TOOLS REQUIRED: #2 phillips screwdriver and a side cutters

BEFORE BEGINNING, ensure the power switch on the chair is in the off position and unplug the power cord . Allow the chair to sit for 10 minutes before proceeding.

1) Lay the backrest down by releasing the latch on the bottom of the back of the chair as shown below. Be careful not to let the backrest fall forward unsupported.

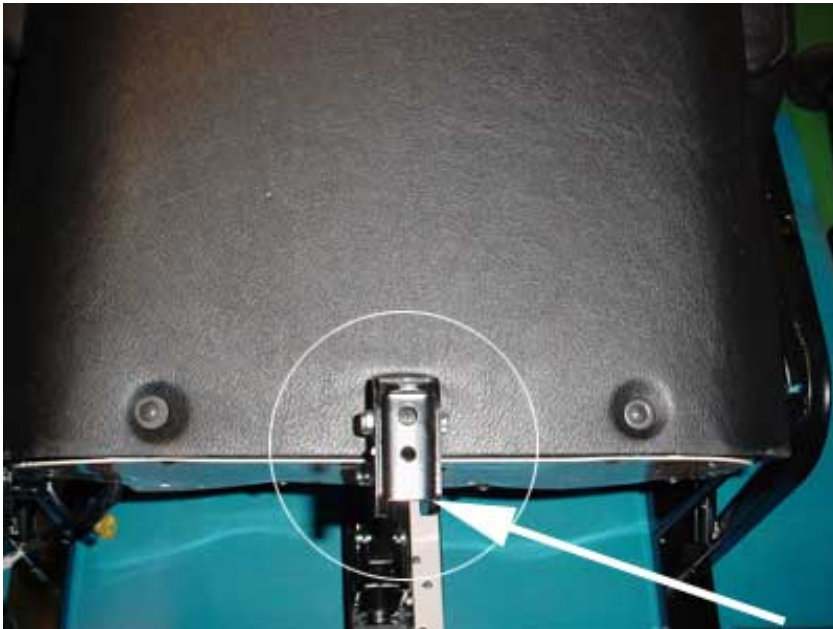

Step 2: remove the single phillips head screw located at the bottom of the backrest retaining the green ground wire.

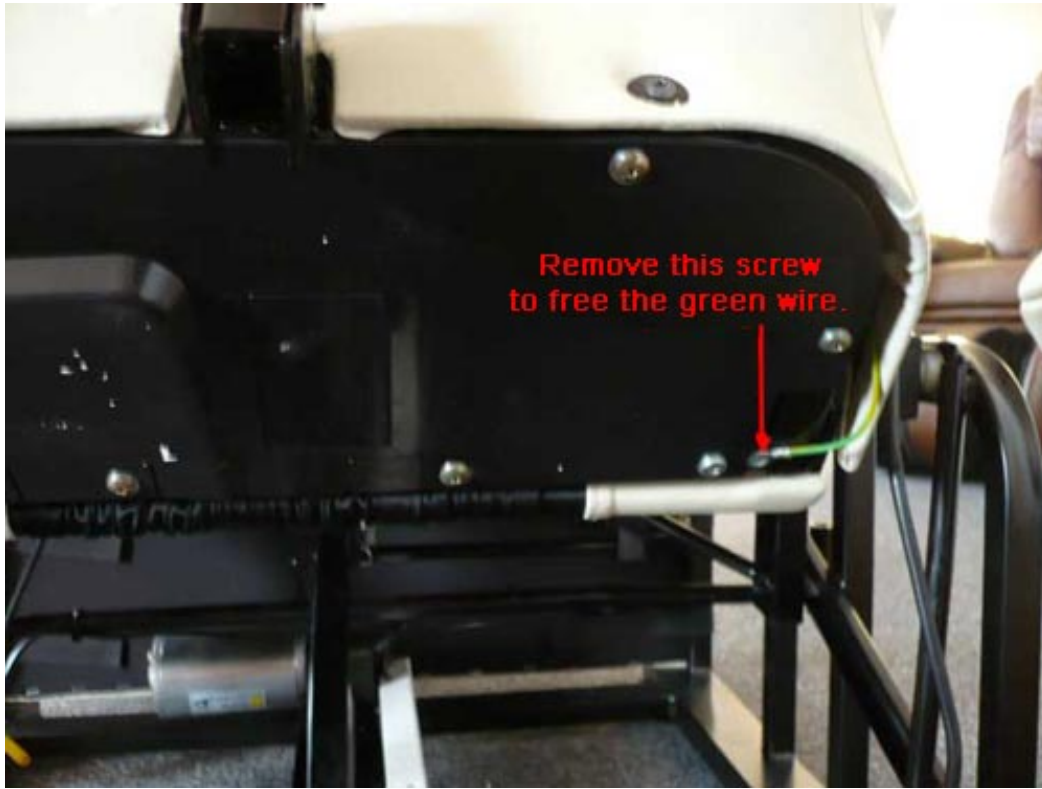


Step 3: Remove the 8 phillips head screws holding the back cover on. BUT DO NOT REMOVE COVER YET.






Step 4: Gently pulling the back cover out you will see a green connector located in the lower right corner of the backrest. Disconnect this to remove back cover.

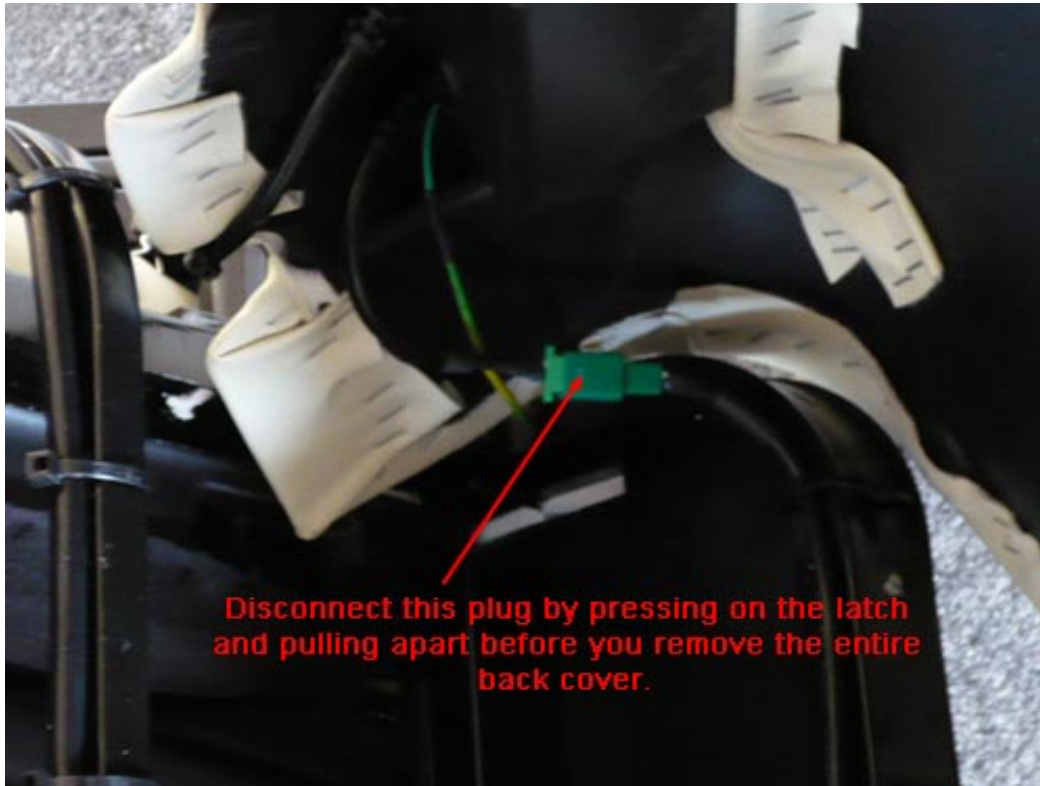

Step 5: Remove cover from Main circuit board by unscrewing 4 phillips head screws located at the corners of plastic cover.

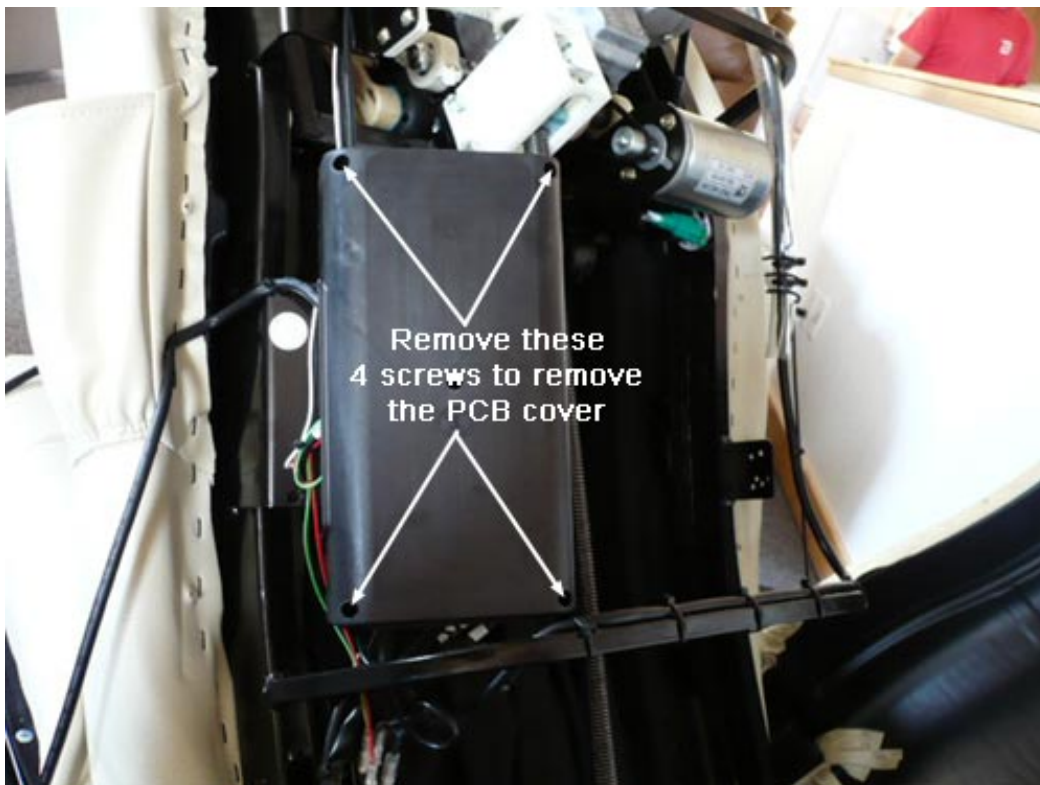

Step 6: Cut zip ties retaining remote controller cord to frame of chair and unplug cable from main circuit board.



Step 7: Plug new remote controller into main circuit board and zip tie wires down where they were before.

Step 8: Reverse instructions to reassembly your massage chair.