

PHP 2030 Instructions to check or replace fuse.

For questions, clarifications or assistance call 303-670-8882

Tools required; small screwdriver or pen knife.

BEFORE BEGINNING, turn the power switch on the chair off and unplug the power cord. Allow the chair to sit for 10 minutes before proceeding.

STEP 1

Locate the fuse holder next to the master power switch on the bottom left back of the chair next to the floor.




STEP 2

Using either a small knife or a long thin screwdriver, hook the locking plate on the right side and gently pry forward. Once the housing is loose remove it with your fingers.





Locate the bad fuse (white arrow) and replace it with the spare fuse (red arrow) located inside the housing.

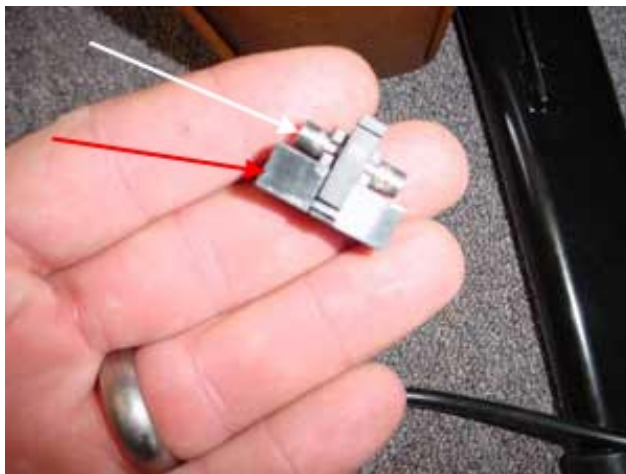

Replace the fuse housing back into the chair.

When reassembly is complete, plug the power cord in, turn the power switch on, and repeat the 5-minute program to ensure that no plugs or connectors were dislodged during the reassembly process.

If after reassembly, and during the final 5-minute test, you detect anything that seems inconsistent with normal operation of the chair, call Premier Health Products Customer Support at 303-670-8882 for immediate assistance.

If the final test is successful, the repair and reassembly has been successfully completed.