



Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy.



Call-1-866-629-7626 

- Home
- Shipping
- Products
- Back Education
- Warranty
- Contact Us

PHP 2022 / 2024


Remote wire replacement,

For questions, clarifications or assistance call 303-670-8882

TOOLS REQUIRED: #2 phillips screwdriver and a side cutters

BEFORE BEGINNING, ensure the power switch on the chair is in the off position and unplug the power cord . Allow the chair to sit for 10 minutes before proceeding.

- 1) Lay the backrest down by releasing the latch on the bottom of the back of the chair as shown below. Be careful not to let the backrest fall forward unsupported.

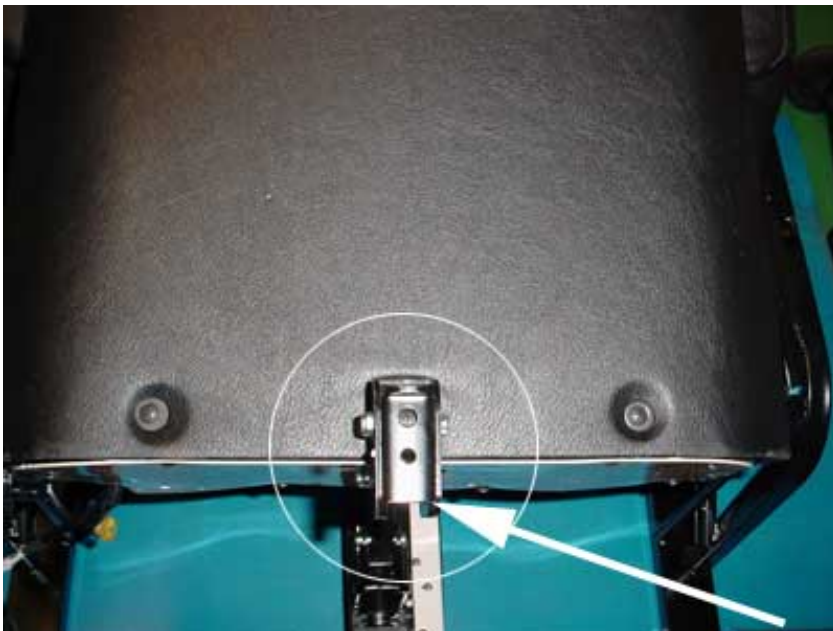


2) Remove the back cover.



3) Disconnect the remote wire from main PCB board and cut the zip ties that hold it in place.



4) Separate the upholstery from the frame.

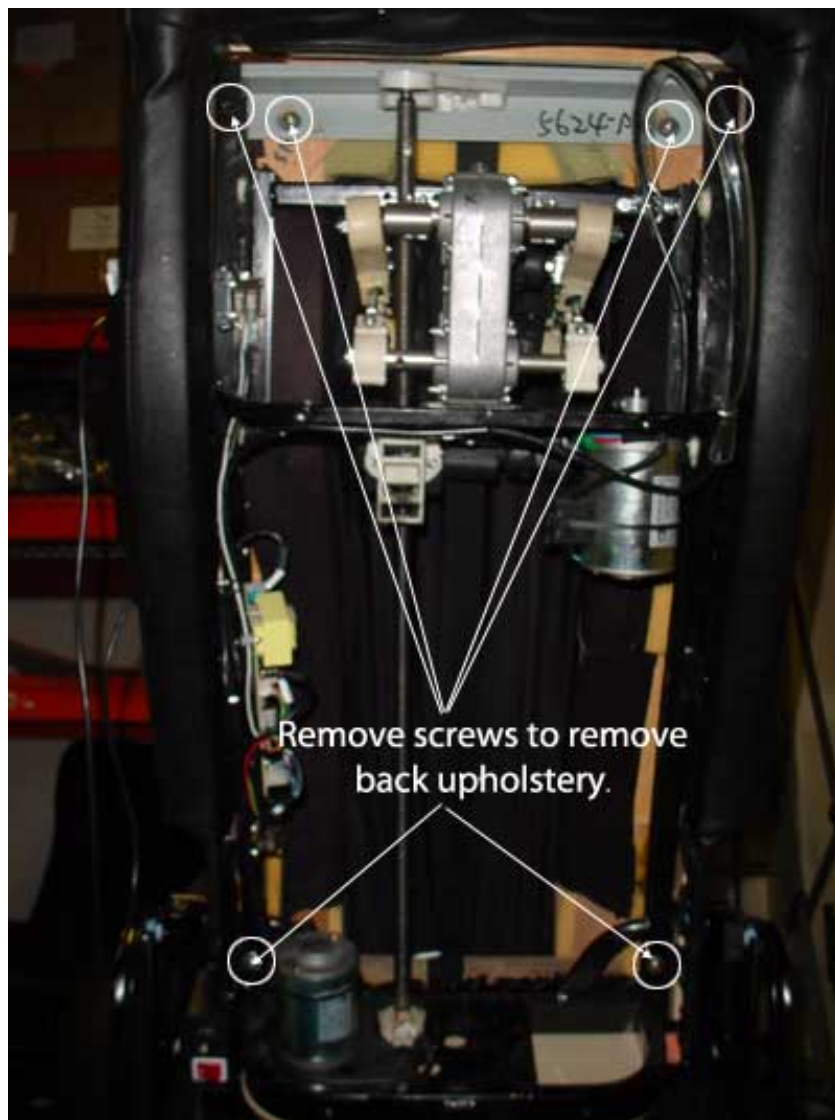

5) Remove the wire from the back upholstery.



- 6) Install the new wire into the back upholstery by pulling about 12" of the wire into the inside of the back upholstery.
- 7) reverse these instructions to finish the cable replacement.
- 8) Review the instructions on the remote PCB replacement to put your remote controller into the new cable

