



Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy.



Call-1-866-629-7626 

- Home
- Shipping
- Products
- Back Education
- Warranty
- Contact Us

PHP 2022 / 2024


Replacing the power box,

For questions, clarifications or assistance call 303-670-8882


TOOLS REQUIRED: 90 degree ratcheting #2 phillips screwdriver and a standard #2 phillips screwdriver

BEFORE BEGINNING, ensure the power switch on the chair is in the off position and unplug the power cord . Allow the chair to sit for 10 minutes before proceeding.

- 1) Lay the backrest down by releasing the latch on the bottom of the back of the chair as shown below. Be careful not to let the backrest fall forward unsupported.

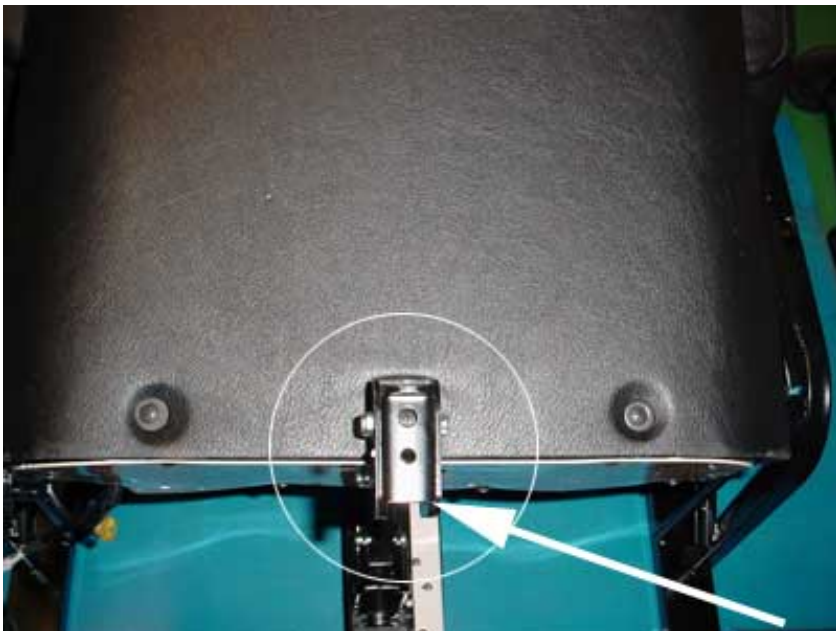


2) Remove the back cover of the chair and lower cover of the back

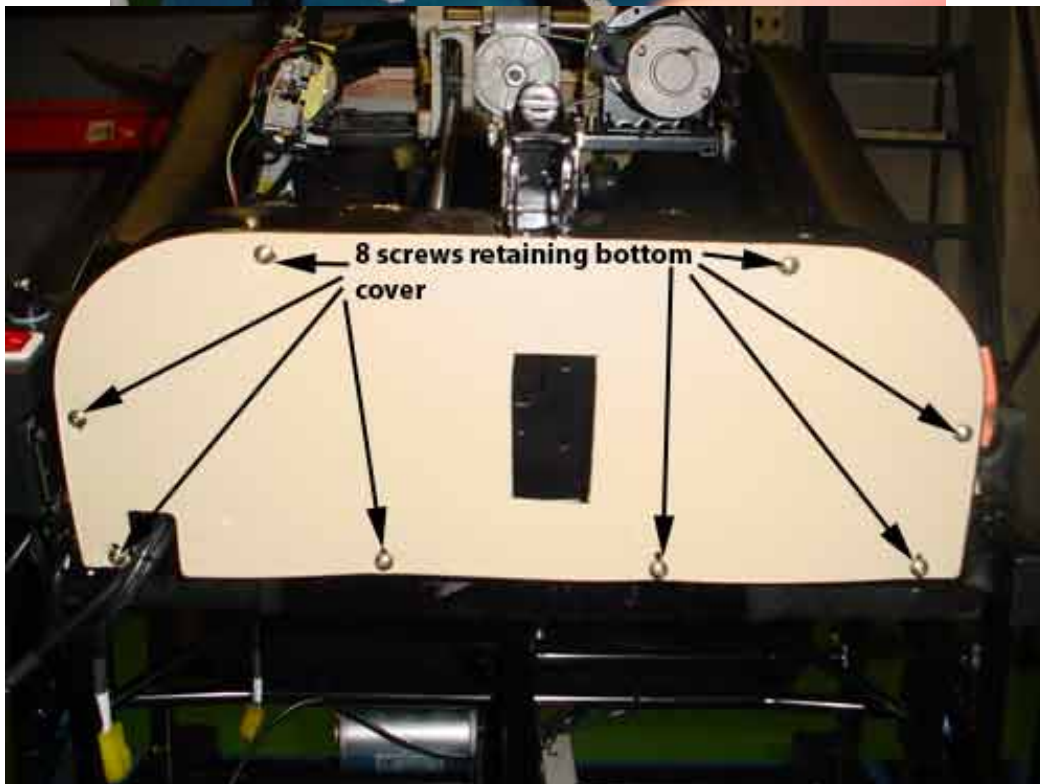

3) Cut the zip-ties holding wire "U1" to the main harness, disconnect wire from main PCB and feed out from under the main PCB.




4) remove the 2 upper screws holding the power box to the chair frame.

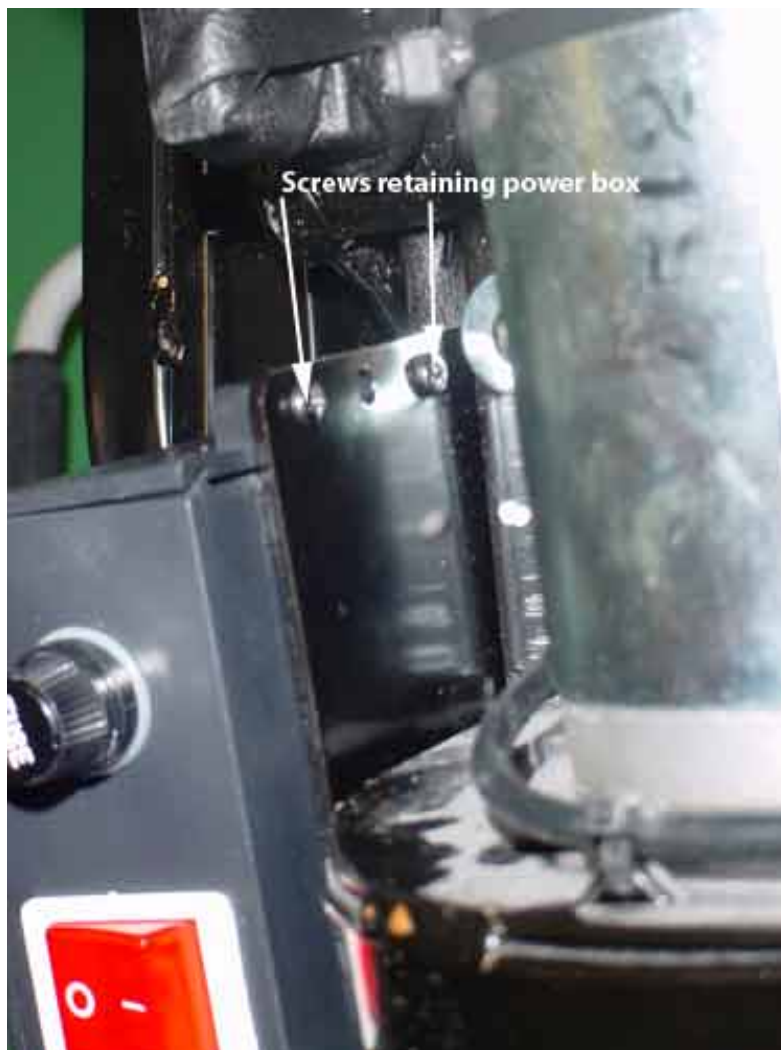

Screws retaining power box

5) Remove the 2 lower screws holding the power box to the frame of the chair.

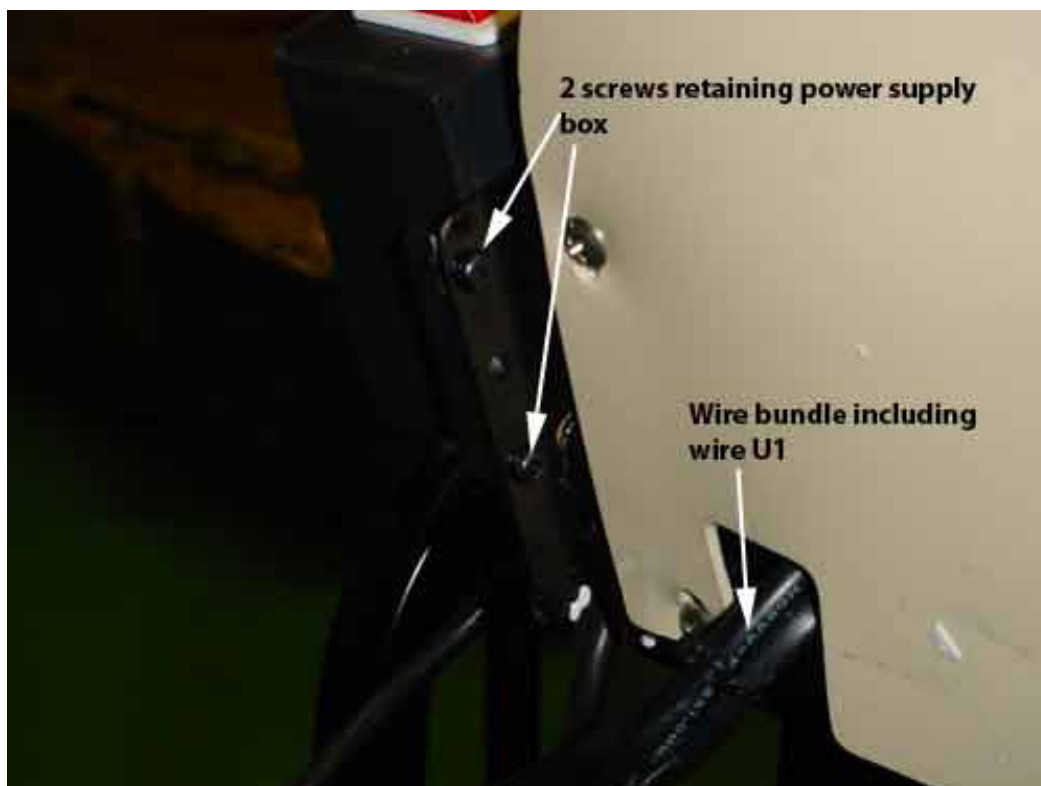

2 screws retaining power supply box

Wire bundle including wire U1

6) Remove power box from and chair and reverse instructions to install new box.