



Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy.



Call-1-866-629-7626 

[Home](#)[Shipping](#)[Products](#)[Back
Education](#)[Warranty](#)[Contact Us](#)

PHP 2022 / 2024

Massage arm replacement,

For questions, clarifications or assistance call 303-670-8882

TOOLS REQUIRED: 8mm socket or nut drive (x2), 10mm Socket or nut driver (x2), 13mm socket and ratchet, 17mm socket and ratchet, pliers, #2 phillips screwdriver and a small amount of white lithium grease.

BEFORE BEGINNING, ensure the power switch on the chair is in the off position and unplug the power cord . Allow the chair to sit for 10 minutes before proceeding.

- 1) Remove the two phillips screws at the bottom of the chair.



- 2) Remove the two phillips screws at the top of the chair




3) Remove both the 13mm nut and the 17mm nuts holding the massage transmission.



4) Remove the 13mm bolt holding the center massage roller and remove.

5) Remove the 10mm nut and bolt holding the two mounting plates together.

6) Remove the four 8mm nuts and bolts holding the two mounting plates to the massage arm .

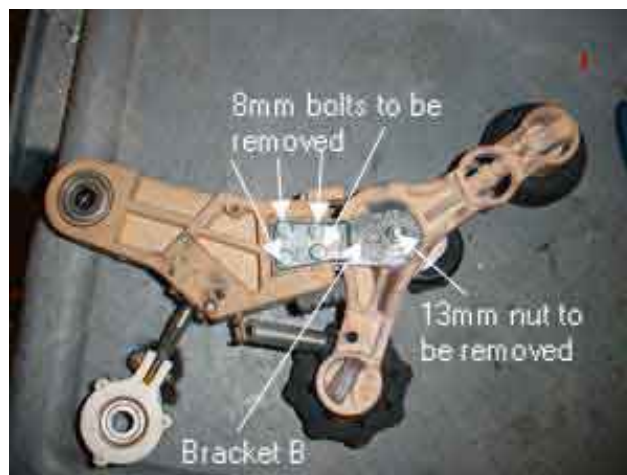



7) Install the brackets below by reversing the steps 1-6.



Call 303-670-8882 if you have any questions or need additional assistance.