

Unboxing and Setup instructions for PHP-2030 Massage Chair


For questions, clarifications or assistance call 303-670-8882

Tools required: knife, scissors or razor knife.

This is how your chair should look upon delivery. If there is any damage, please call Premier Health Products at 866-629-7626.



Step 1) Cut all four plastic bands wrapped around box.

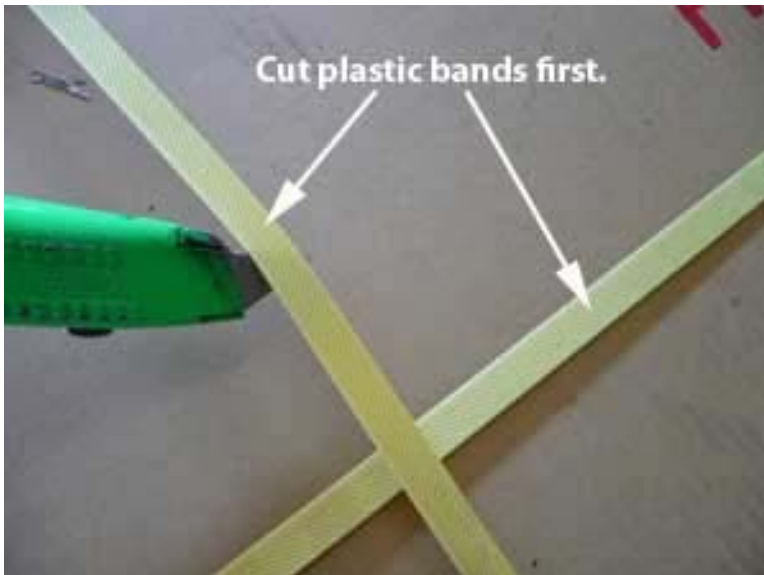

Step 2) Lift lid off of box and set aside - there is no need to cut the tape on the lid to remove it.



Step 3) Remove the back cushion, head pillow, accessory box, and all packing from around chair (put them in the lid for safe-keeping until ready to attach to chair).

Step 4) Take one of the cardboard pads used to protect the armrests and set behind box .



Step 5) Have an assistant stand at the back of the chair and lift box up from the footrest end until the chair is sitting 90 degrees upright. Note to assistant; the backrest will try and unfold during this process so keep a good hold on the chair.



Step 6) Have assistant gently rock chair back toward them so you can pull the lower box out from under the chair.



Your assistant will push on the backrest to roll the chair onto its base while you control the descent with the footrest.


Step 7) Once the chair is on the floor, place it in desired location, typically within 5' of an electrical outlet.

Step 8) Raise backrest into upright position until you hear the latch "click" into place.



Chair with backrest upright.

Step 9) Unpack the back cushion and head pillow. Connect the 3 electrical plugs and air line for back cushion and speaker set (see below). Zip the back cushion onto the backrest upholstery and attach the head pillow with Velcro strips (see below).

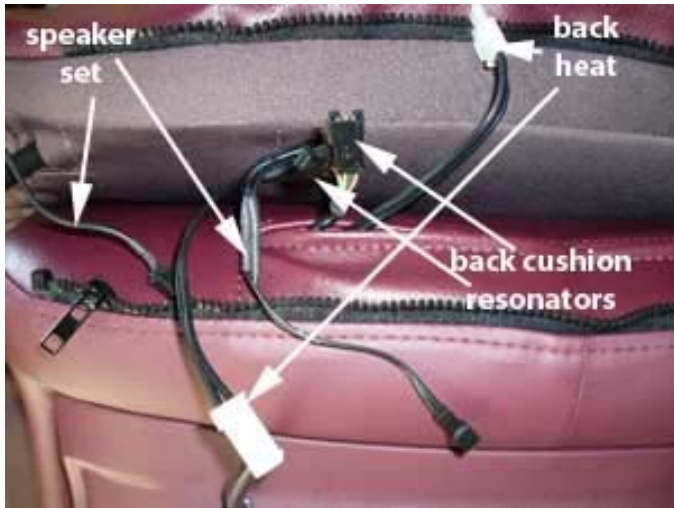



Step 10) Mount the remote control stand






Step 11) Plug in the power cord. Note Premier Health Products recommends the use of a quality surge suppressor.



Step 12) If you feel the massage is too strong initially, you may insert one or both of the cushioned pads included with your chair. If you need additional pads please contact Premier Health Products at 866-629-7626. DO NOT substitute a pillow or blanket as damage may result that IS NOT covered under warranty.

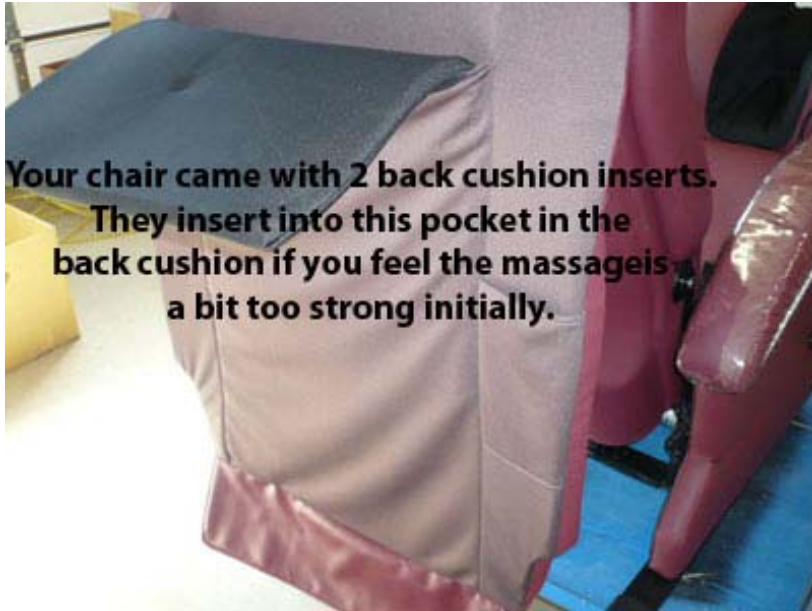

**Your chair came with 2 back cushion inserts.
They insert into this pocket in the
back cushion if you feel the massage is
a bit too strong initially.**