



## Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy



Call-1-866-629-7626 

[Home](#)[Shipping](#)[Products](#)[Back  
Education](#)[Warranty](#)[Contact Us](#)

### **PHP 2026 – 2027 Recline motor replacement.**

For questions, clarifications or assistance call 303-670-8882

*Tools required: scissors or snips and pliers.*

***BEFORE BEGINNING, turn the power switch on the chair off and unplug the power cord .*** Allow the chair to sit for 10 minutes before proceeding.

Lock the leg rest assembly up. This will allow increased access to the working area



Lift the leg rest up and, while holding it up.....

...use your left hand to push the locking mechanism (square tubing) up. Release your hold on the leg rest assembly. The entire assembly should remain up for better access to the work area.




(After completion of the entire task, lower the leg-rest by simply lifting the entire assembly up which will automatically release the lock).

Locate the 3" x 4" expansion board cover and remove it.




Locate the recline and footrest connectors below. Recline in red, footrest in white

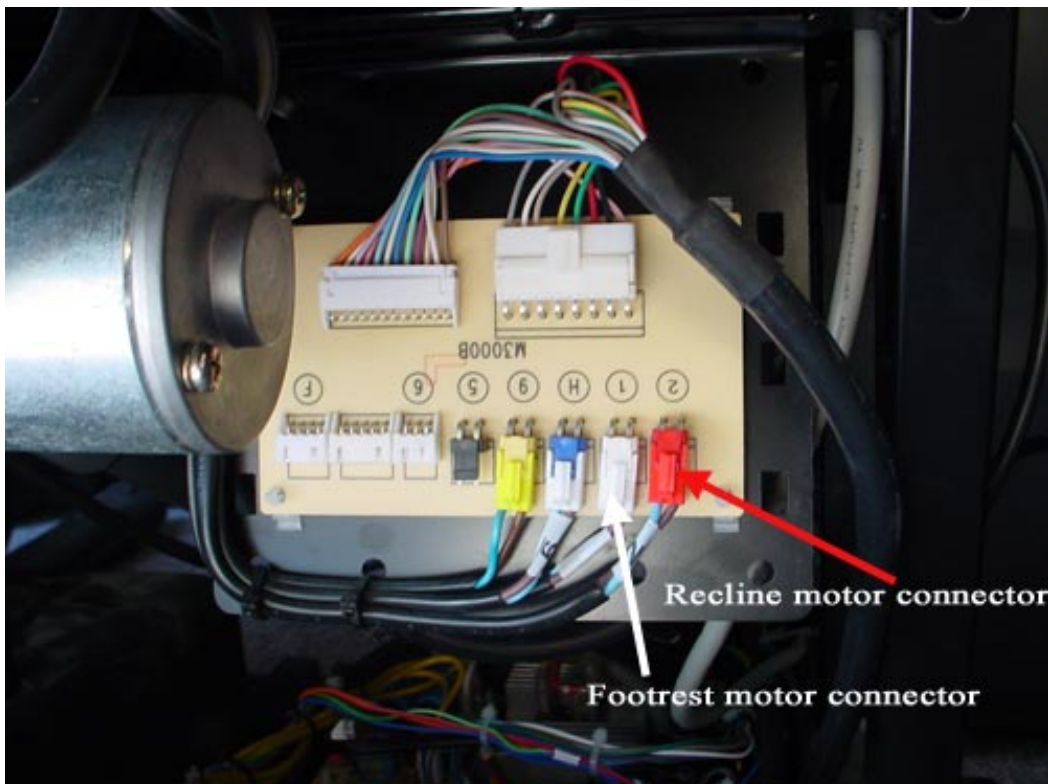

Disconnect the recline motor connector. (Red)

Remove the cotter pin and pin in the rear of the recline motor

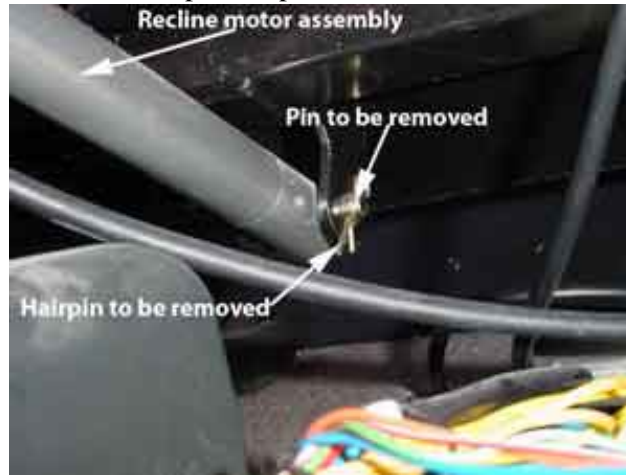

Remove the cotter pin, spring and pin in the front of the motor and remove the motor from the chair.



Install the new motor by reversing these steps and rerouting the wire the way it was originally and zip tying it back to the frame of the chair.

*If after reassembly, and during the final 5-minute test, you detect anything that seems inconsistent with normal operation of the chair, call Premier Health Products Customer Support at 303-670-8882 for immediate assistance.*