


PHP2030 Removal of Leg Massage Assembly

For questions, clarifications or assistance call 303-670-8882

Tools required: 10mm open end wrench or smaller adjustable wrench, Phillips screwdriver, wire cutter or other tool to cut plastic zip ties, prop OR a 2nd person to hold up foot massage while working to remove it.

BEFORE BEGINNING turn the main power switch off as illustrated below and unplug the power cord.

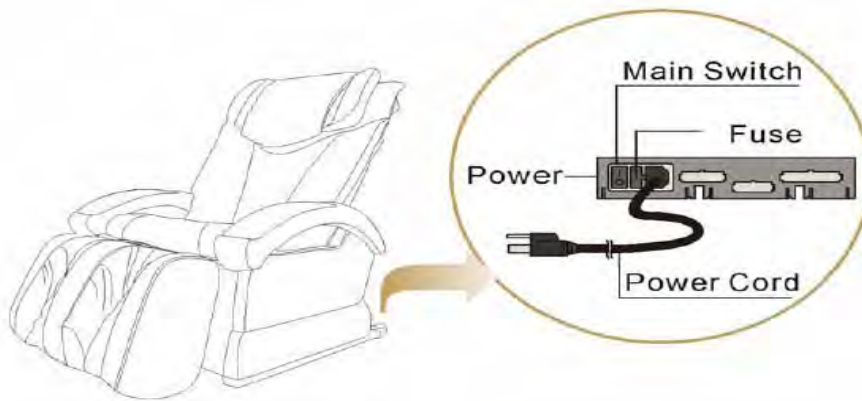


Allow the chair to sit for 10 minutes before proceeding.


Step1) Lock the leg rest assembly up. This will allow increased access to the work area. See below for specific instructions. Lift the leg rest up and, while holding it up...use your left hand to push the locking mechanism (square tubing) up. (After completion of the entire task, lower the leg-rest by simply lifting the entire assembly up which will automatically release the lock).




Step 2) Remove the vanity panel (protective cover) from front of chair found beneath the footrest.

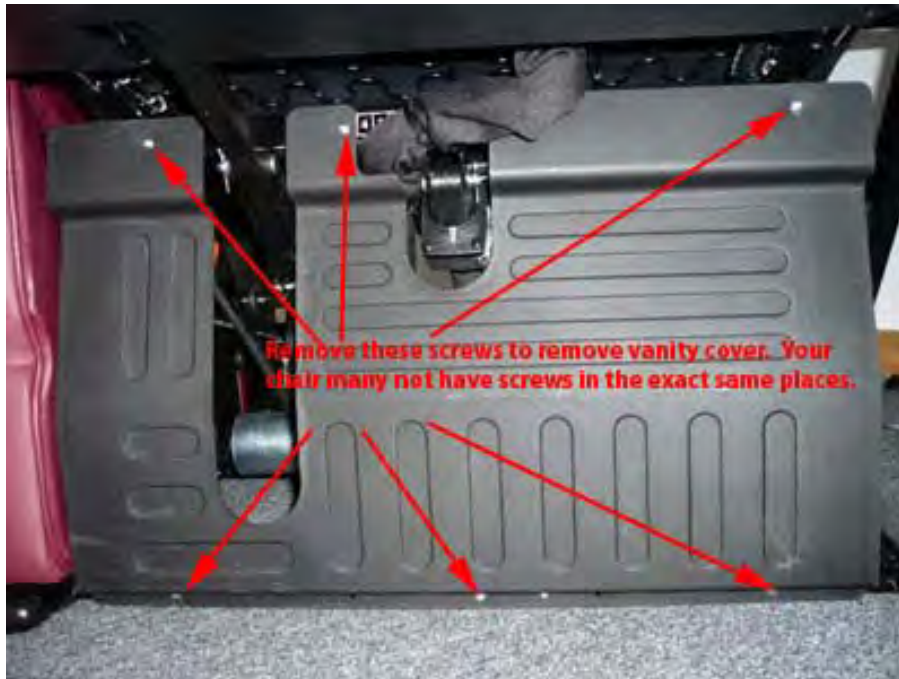

Step 3) Remove screws holding footrest protection cover on underside of foot massage unit.

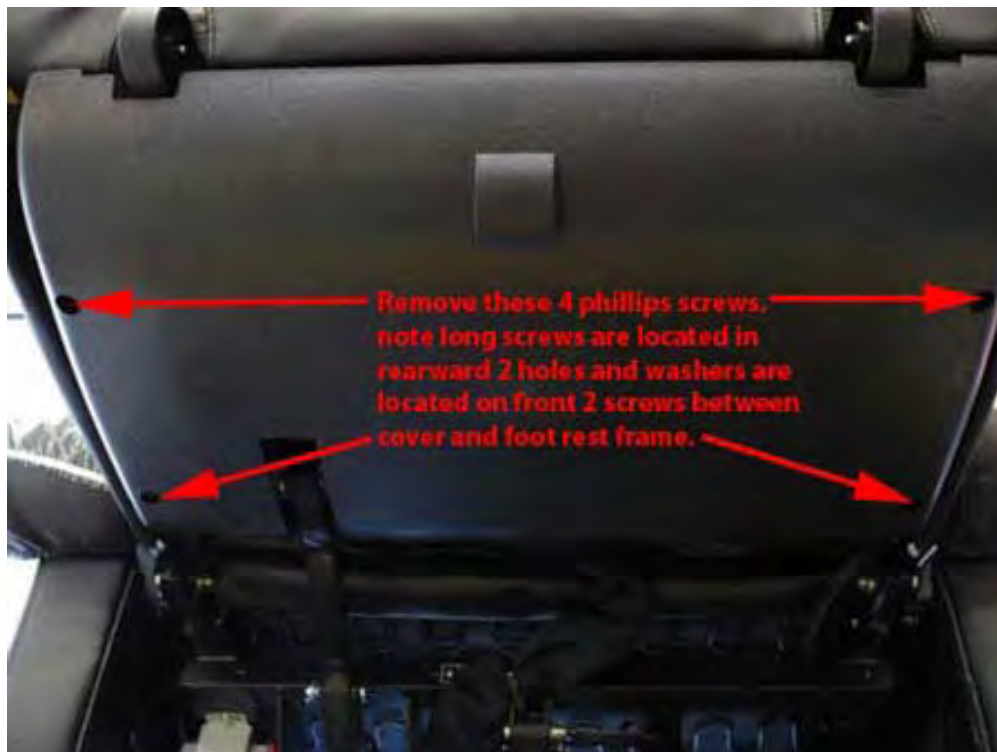


Step 4) Remove the expansion board cover. The expansion board is located in the upper right corner behind vanity panel cover removed in step 2.

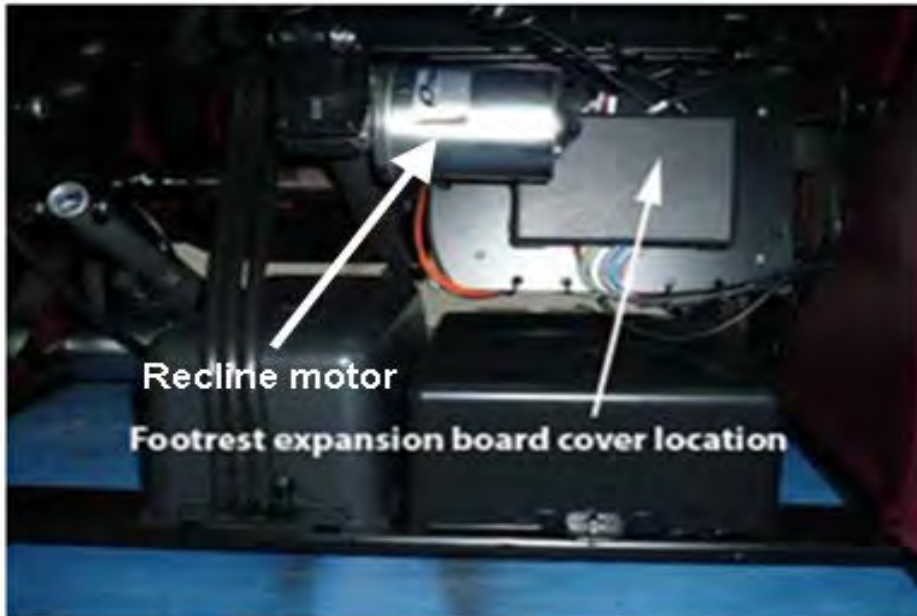

Step 5) Remove the wires 9, 3, R and F as noted in next picture and cut all appropriate zip ties to *completely* free wires from chair so they are only attached to foot massage assembly.

The circuit board will look like this.

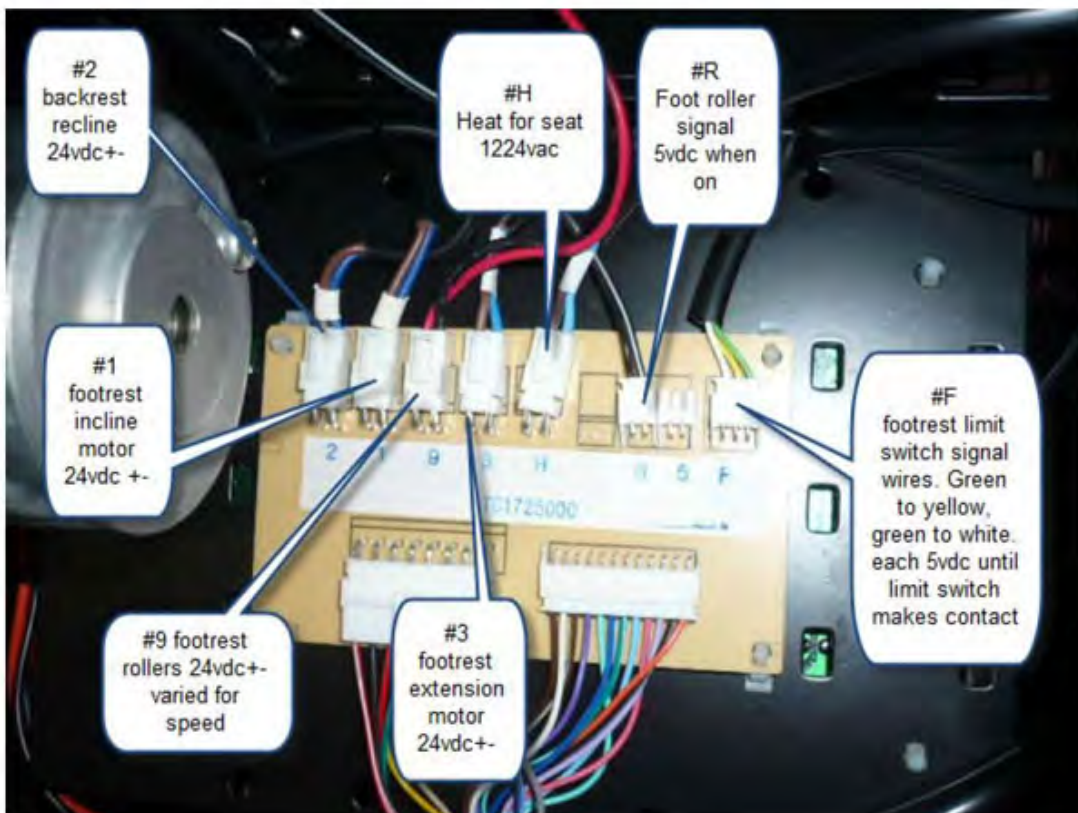

Step 6) Clip the zip tie holding the hoses to the frame.



Remove all 3 airlines from elbow at upper frame noting there is a number tag on each hose which corresponds to the number tag on the frame.




Step 7) Lift up the seat cushion (due to air lines and wires it will not come off entirely) and pull the flap out of the way that is attached to the foot massage assembly.




Step 8) Have your assistant gently lift up on the foot massage unit until you can remove the Lock clip, spring and pin that are holding the incline bar in place OR prop footrest up and do the same.



Step 9) Remove two 10mm nuts and bolts holding foot massage assy to chair frame.

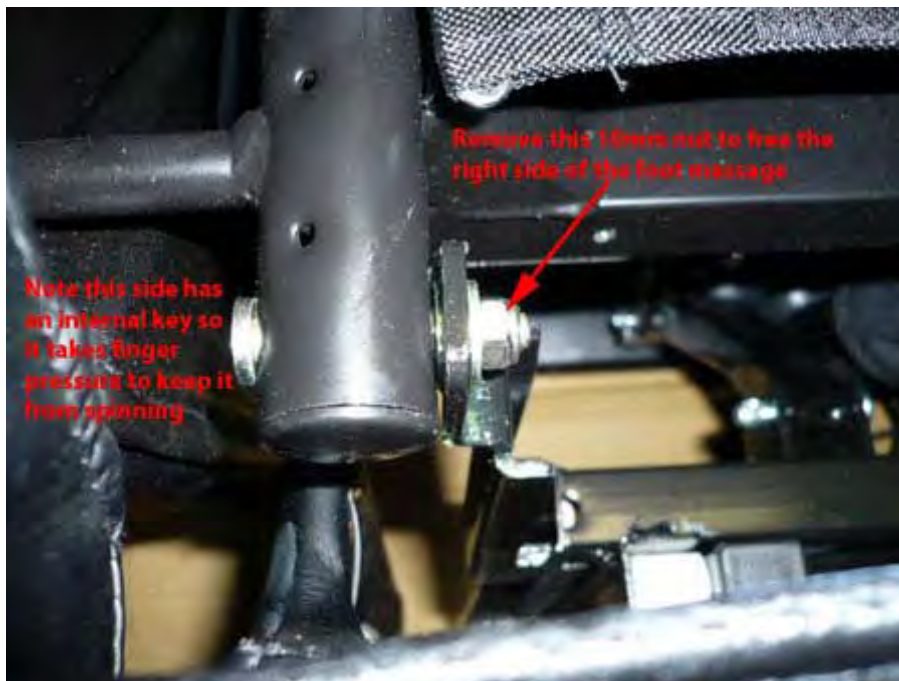

Step 10) Remove foot/leg massage from chair and install new unit by reversing the instructions. When installing the wires onto the expansion board shown in step 8 please refer to the picture below showing the wires connected properly. Note color code of wires when reattaching the red/black and blue/brown wires.

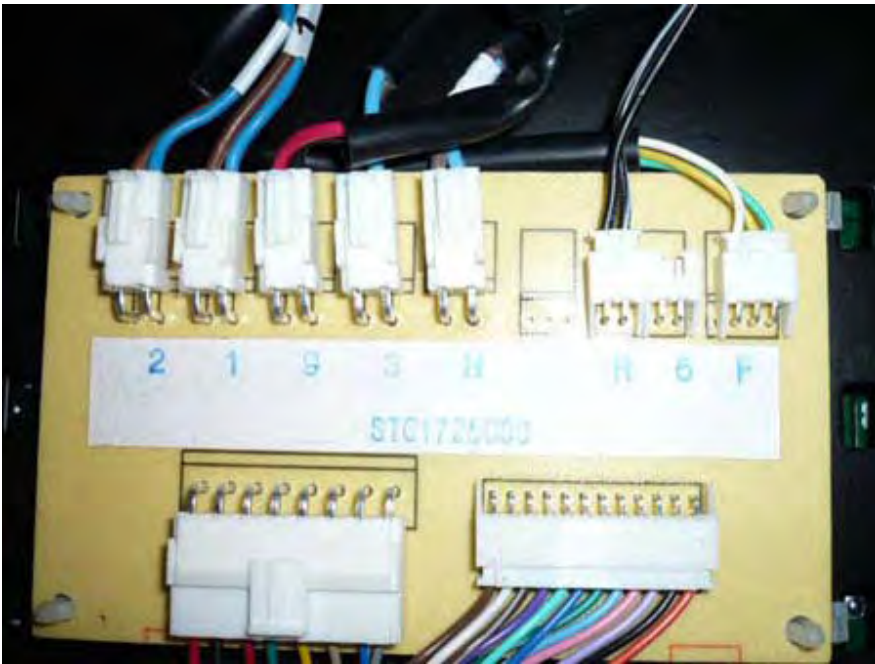

If you need clarification of these instructions or need additional assistance repairing your chair please call Elite Massage Chairs at 303-670-8882 x1