



Premier Health Products

The leading distributor, designer and importer of shiatsu massage chairs utilizing shiatsu massage therapy.




Call-1-866-629-7626 


[Home](#)[Shipping](#)[Products](#)[Back
Education](#)[Warranty](#)[Contact Us](#)

Kneading bracket replacement


For questions, clarifications or assistance call 303-670-8882


- 1) Refer to instructions for laying down the backrest and [removal of back cover](#).
- 2) Once cover is removed press Power on remote controller then kneading and finally use the up and down arrow buttons to move the kneading frame down so you will have enough room to get a screwdriver in at the top of the kneading motor.
- 3) Turn the power off to the chair using the main power switch located next to the power cord. **DO NOT TURN CHAIR OFF USING REMOTE CONTROLLER.**
- 4) Disconnect power cord from outlet.
- 5) Using a bladed screwdriver pry the cooling fan off of the kneading motor.

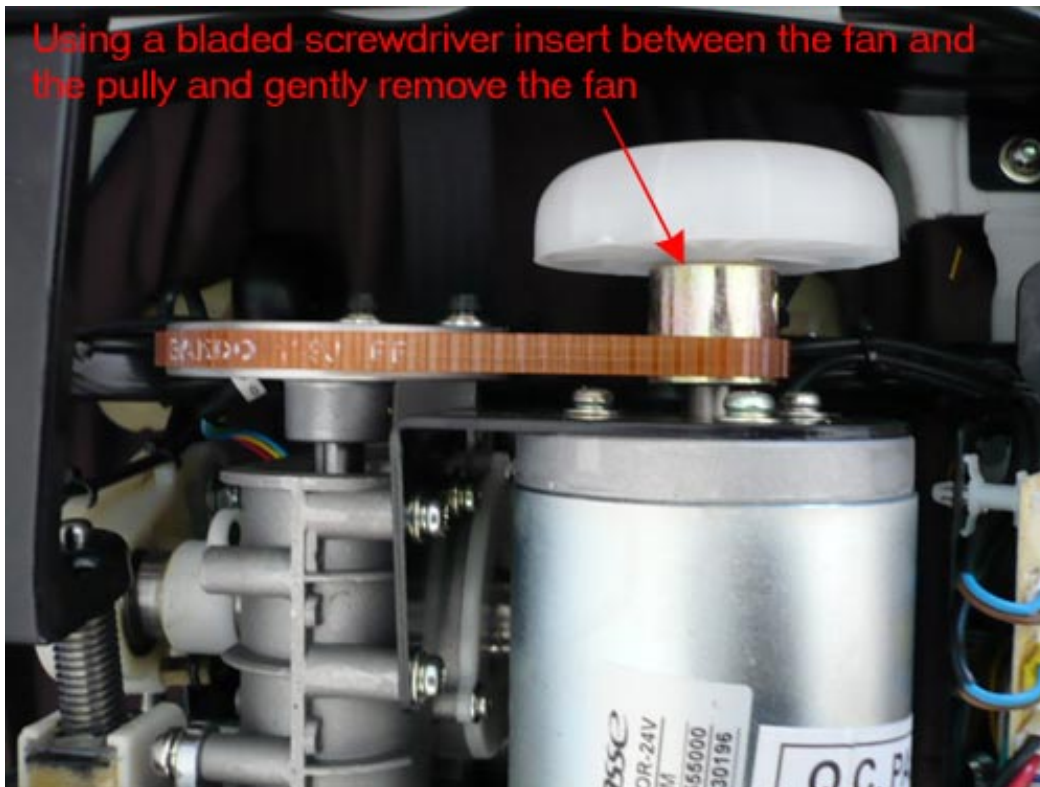

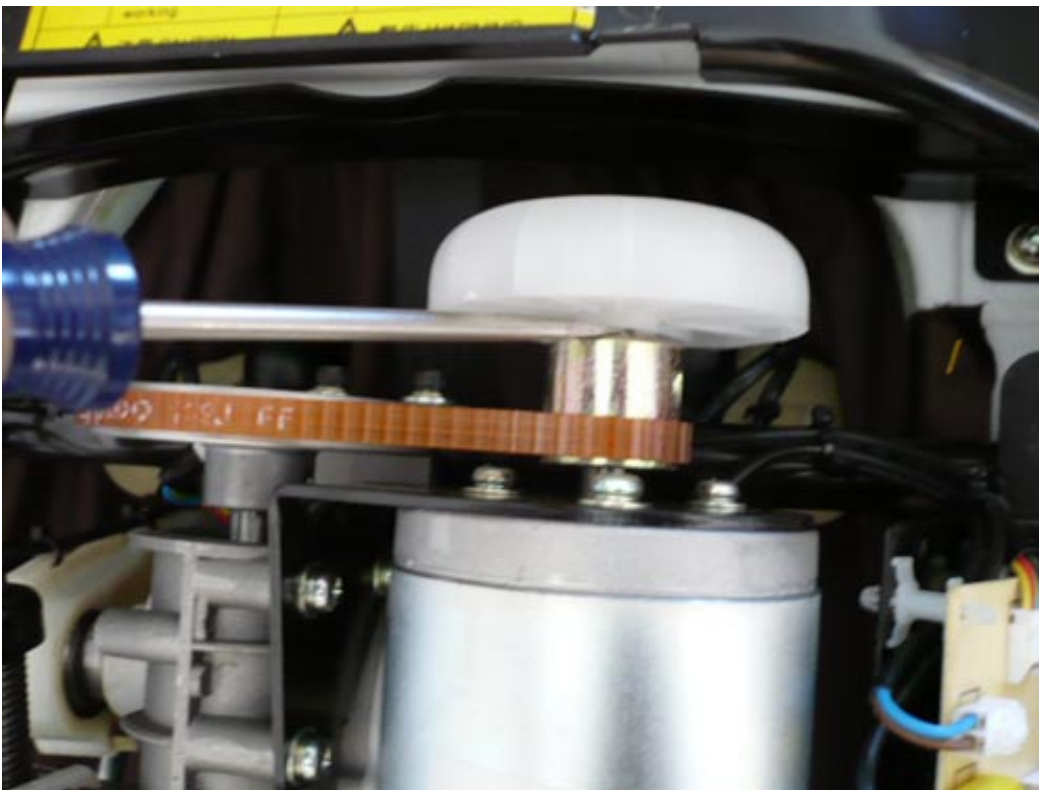


- 6) Remove the belt by pressing it up and rolling it off of the larger pulley.
- 7) Remove the 3mm set screw securing the pulley to the motor shaft.

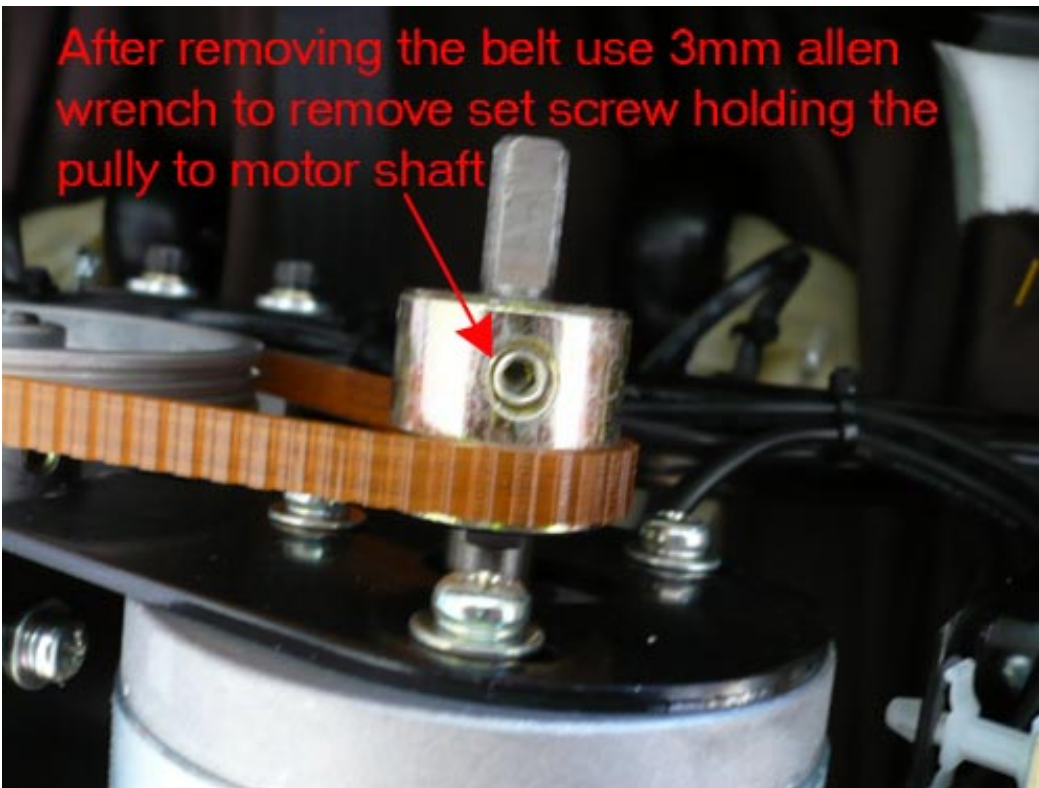

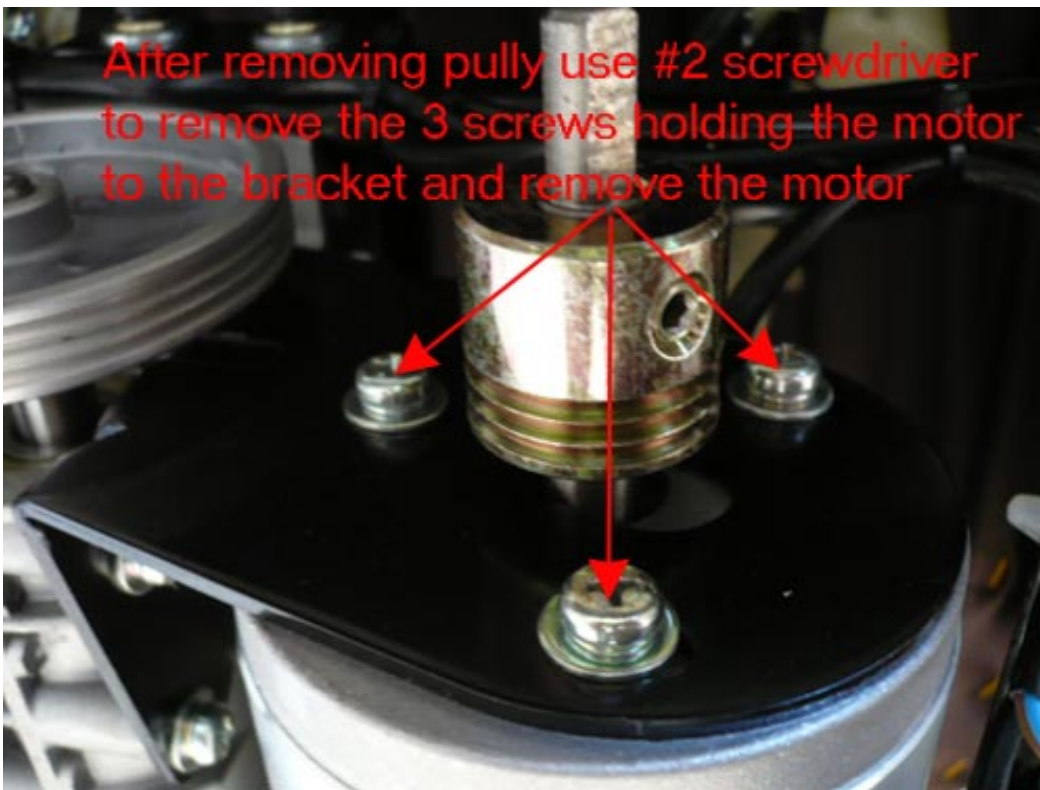

8) Remove the 3 screws holding the motor to the bracket. There is no need to disconnect motor power wire just set the motor down near the massage arm.

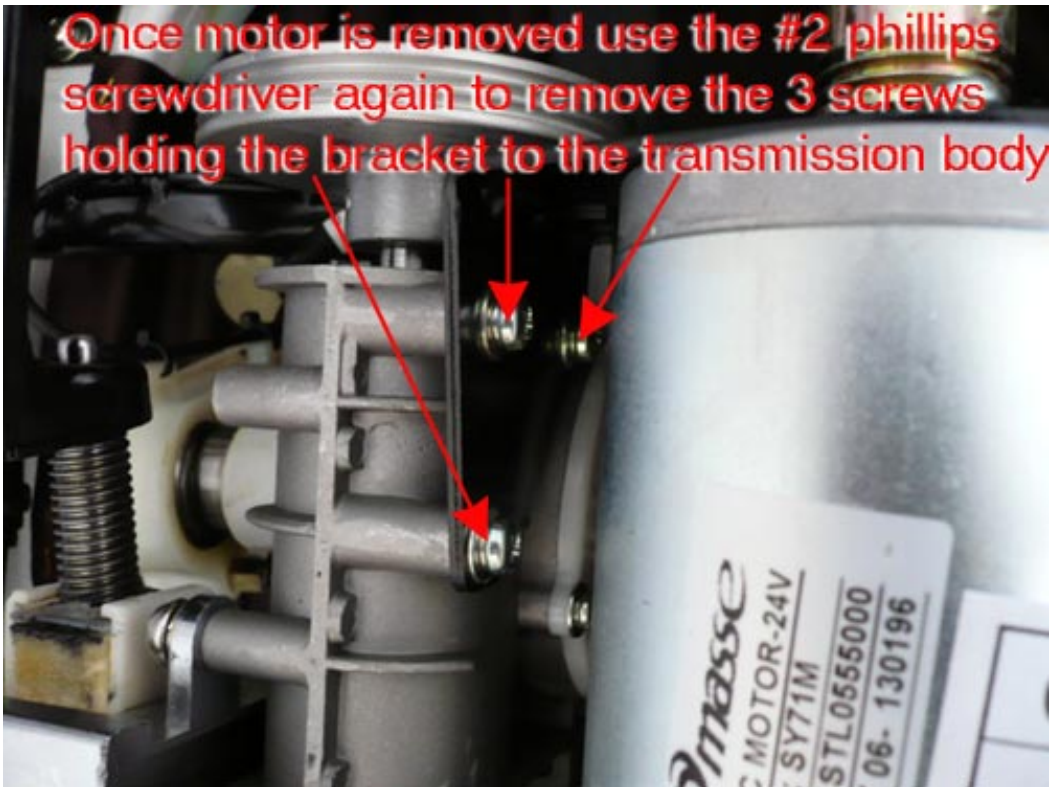

9) Once motor is out of the way remove the 3 screws holding the kneading motor fixing bracket to the transmission.

10) Reverse instructions to install new bracket. When pulley is installed on motor do not tighten set screw until belt is installed so pulley can be moved up or down to get the pulleys aligned. Once pulleys are aligned properly and set screw is tightened press the cooling fan back onto the motor shaft.

Call 303-670-8882 if you have any questions or need additional assistance.